


# *LifeFitness*

**ARCTIC SILVER 93CW Upright Bike**

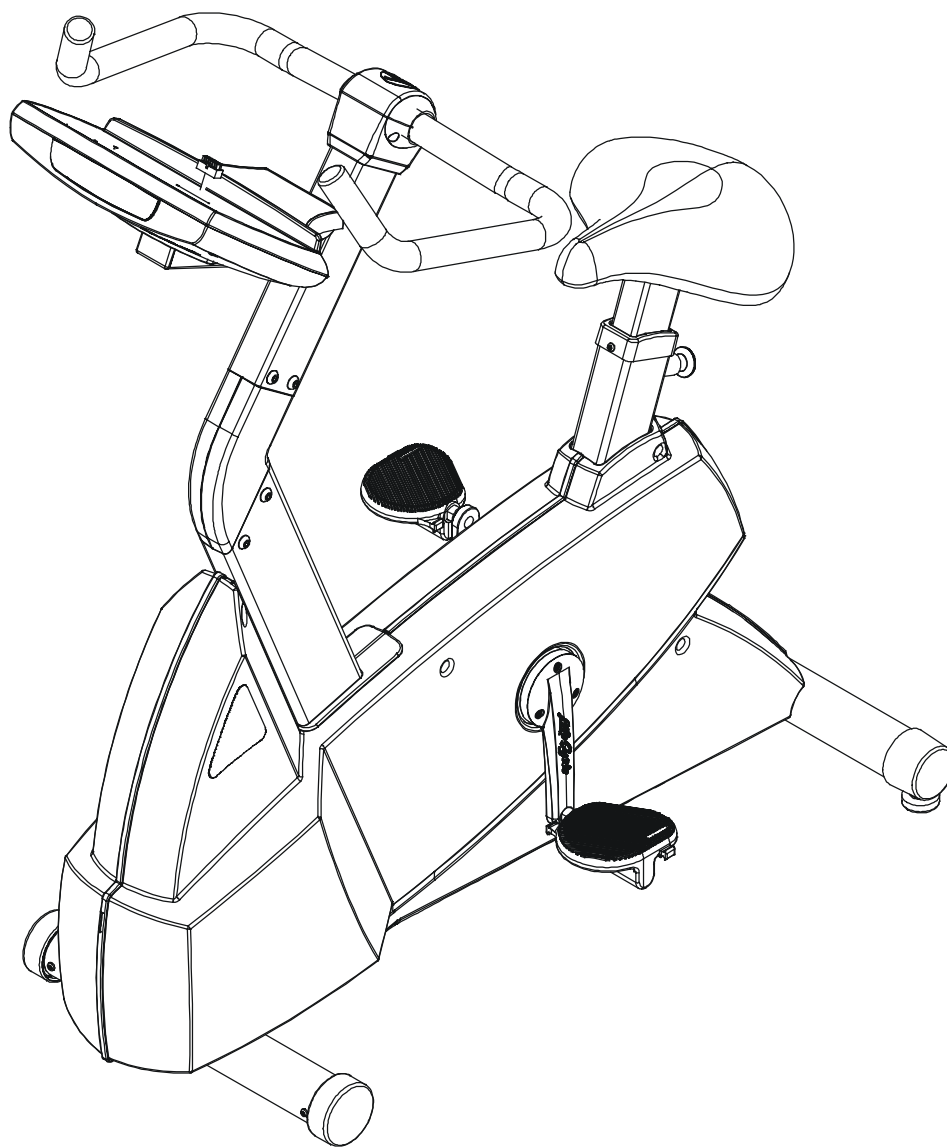

**Customer Support Services**  
***PARTS MANUAL***

**ARCTIC SILVER 93CW**  
**REFERENCES**

**93CW-0XXX-02**  
**S/N CCM100000 and up**

---

OPERATION MANUAL	M051-00K63-A068
HARDWARE BAG	GK63-00002-0044
NETWORK C-SAFE KIT	GK63-00002-0003
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
COAX CABLE	AK32-00020-0002
ER READY BRACKET ASSEMBLY ASSEMBLY CONSISTS OF: 1) POWER CABLE 2) ER READY BRACKET 3) F TYPE CONNECTOR	AK63-00215-0000  AK32-00078-0001 0K63-0329-0000 0017-00021-2846
SERVICE MANUAL	M051-00K63-A009

**NOTE: ADDING THE BOLT ON LCD SCREEN TO THE  
93CW-0XXX-02 MAKES THE UNIT A 93CER-0XXX-02.**

**ARCTIC SILVER 93CW**  
**CONTENTS**

**93CW-0XXX-02**  
**S/N CCM100000 and up**


---

	Page
CONSOLE AND RELATED COMPONENTS.....	4
CONSOLE MOUNTING SCREWS AND POLAR COVERS.....	5
ALTERNATOR W/PULLEY .....	6
CRANKSHAFT AND BEARING ASSEMBLY.....	7
INTERMEDIATE SHAFT AND BEARING ASSEMBLY.....	8
SEAT LATCH ASSEMBLY.....	9
SEAT POST ASSEMBLY .....	10
SEAT POST SHROUDS.....	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY.....	13
LEFT SIDE SHROUD AND CRANKARM .....	14
RIGHT SIDE SHROUD AND CRANKARM.....	15
PCB MOUNTING BRACKET ASSEMBLY.....	16
FRONT WHEELS.....	17
RESISTOR ASSEMBLY.....	18
HANDLEBAR ASSEMBLY.....	19
BELTS.....	20
CABLES.....	21

# ARCTIC SILVER 93CW

## Console and Related Components

**93CW-0XXX-02**  
**S/N CCM100000 and up**

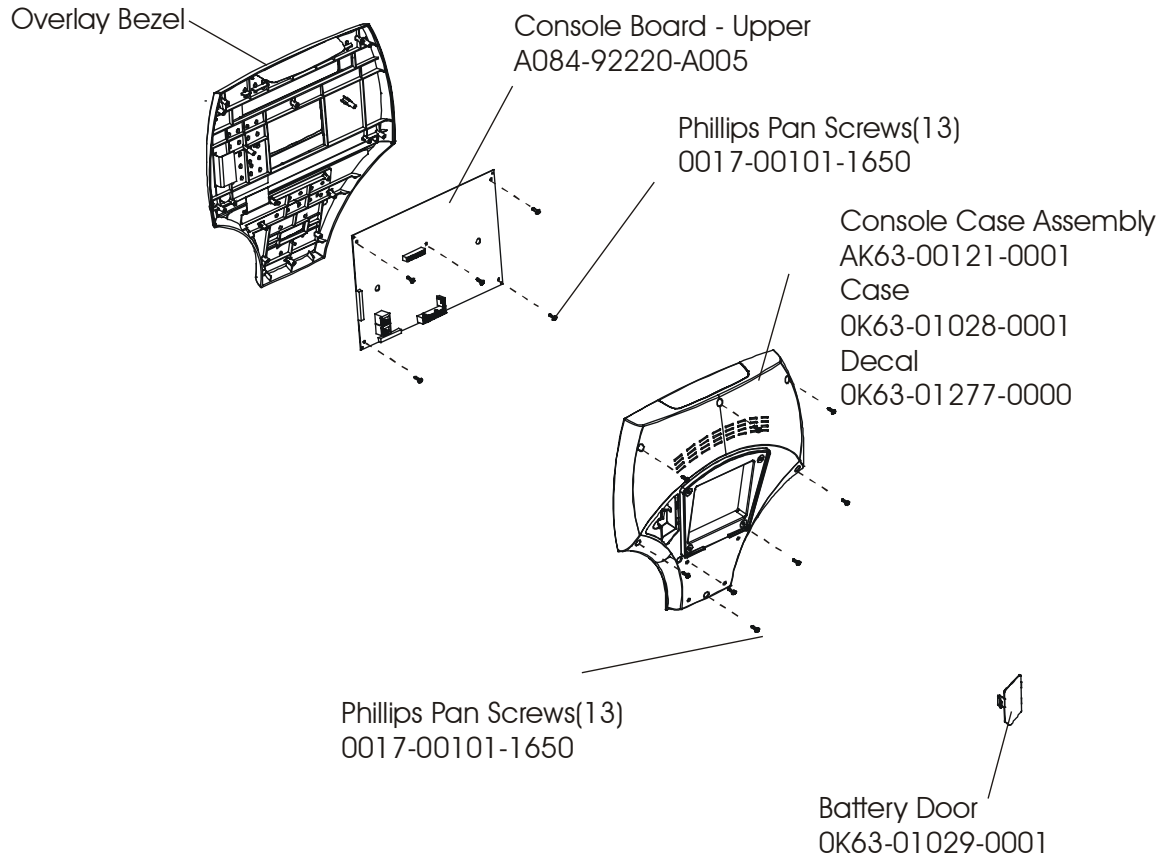


Console Assembly	Bezel W/Overlay Assy.
AK63-00161-0001 Eng Met	AK63-00166-0001 Eng Met
AK63-00161-0003 Ger Met	AK63-00166-0003 Ger Met
AK63-00161-0004 Spn Met	AK63-00166-0004 Spn Met
AK63-00161-0006 Jap Met	AK63-00166-0006 Jap Met
AK63-00161-0007 Frn Met	AK63-00166-0007 Frn Met
AK63-00161-0008 Itl Met	AK63-00166-0008 Itl Met
AK63-00161-0009 Dut Met	AK63-00166-0009 Dut Met
AK63-00161-0010 Por Met	AK63-00166-0010 Por Met

## ARCTIC SILVER 93CW

### Console Mtg. Screws & Polar Covers

93CW-0XXX-02

S/N CCM100000 and up

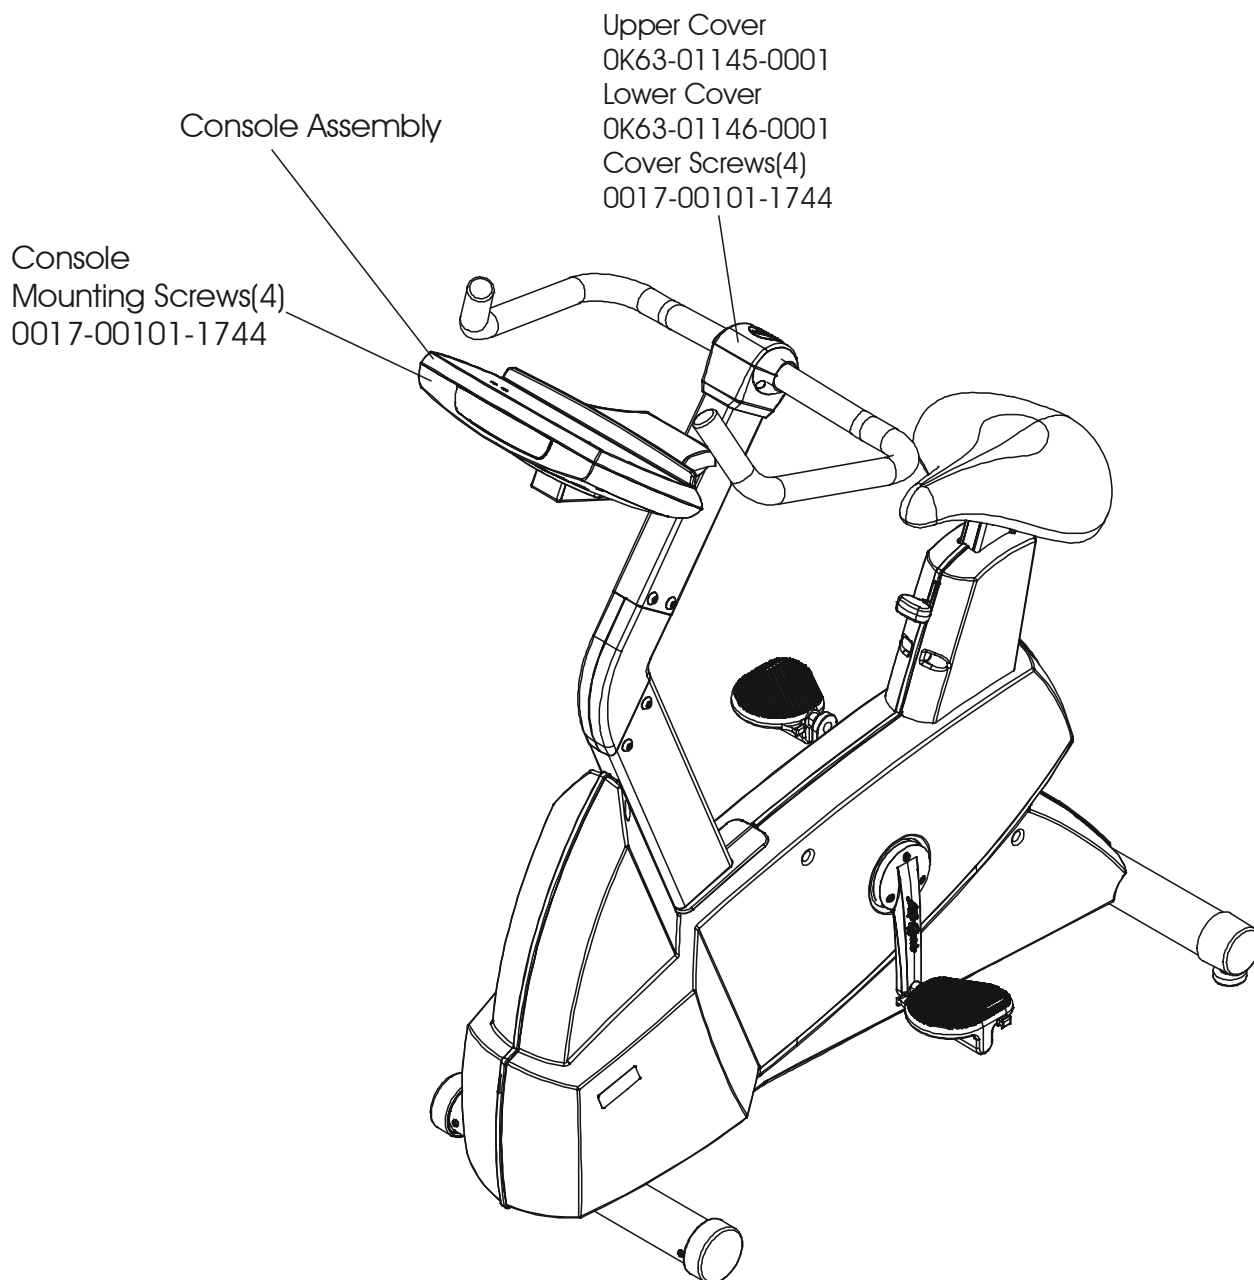


# ARCTIC SILVER 93CW

Alternator w/Pulley-AK63-00093-0000


93CW-0XXX-02

S/N CCM100000 and up

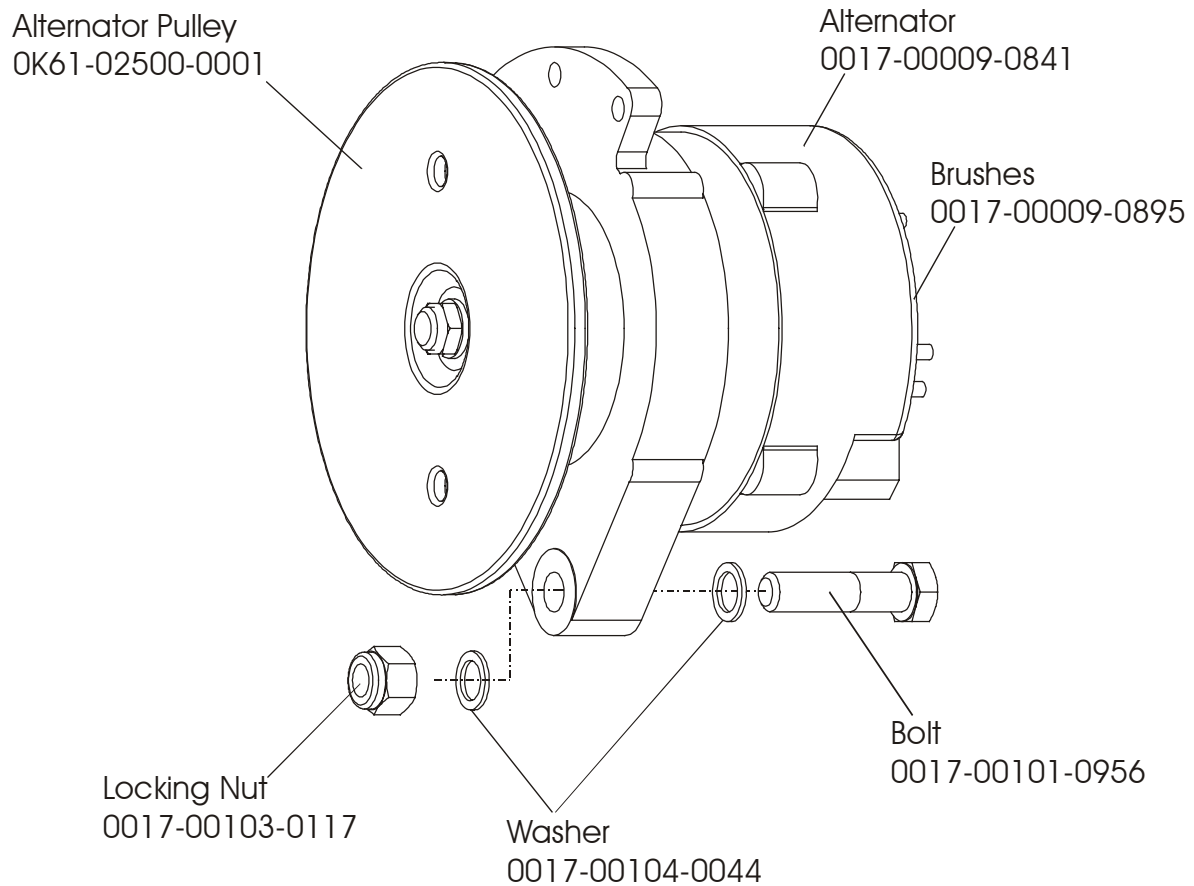

**ARCTIC SILVER 93CW**  
**Crankshaft and Bearing Assembly**


**93CW-0XXX-02**  
**S/N CCM100000 and up**

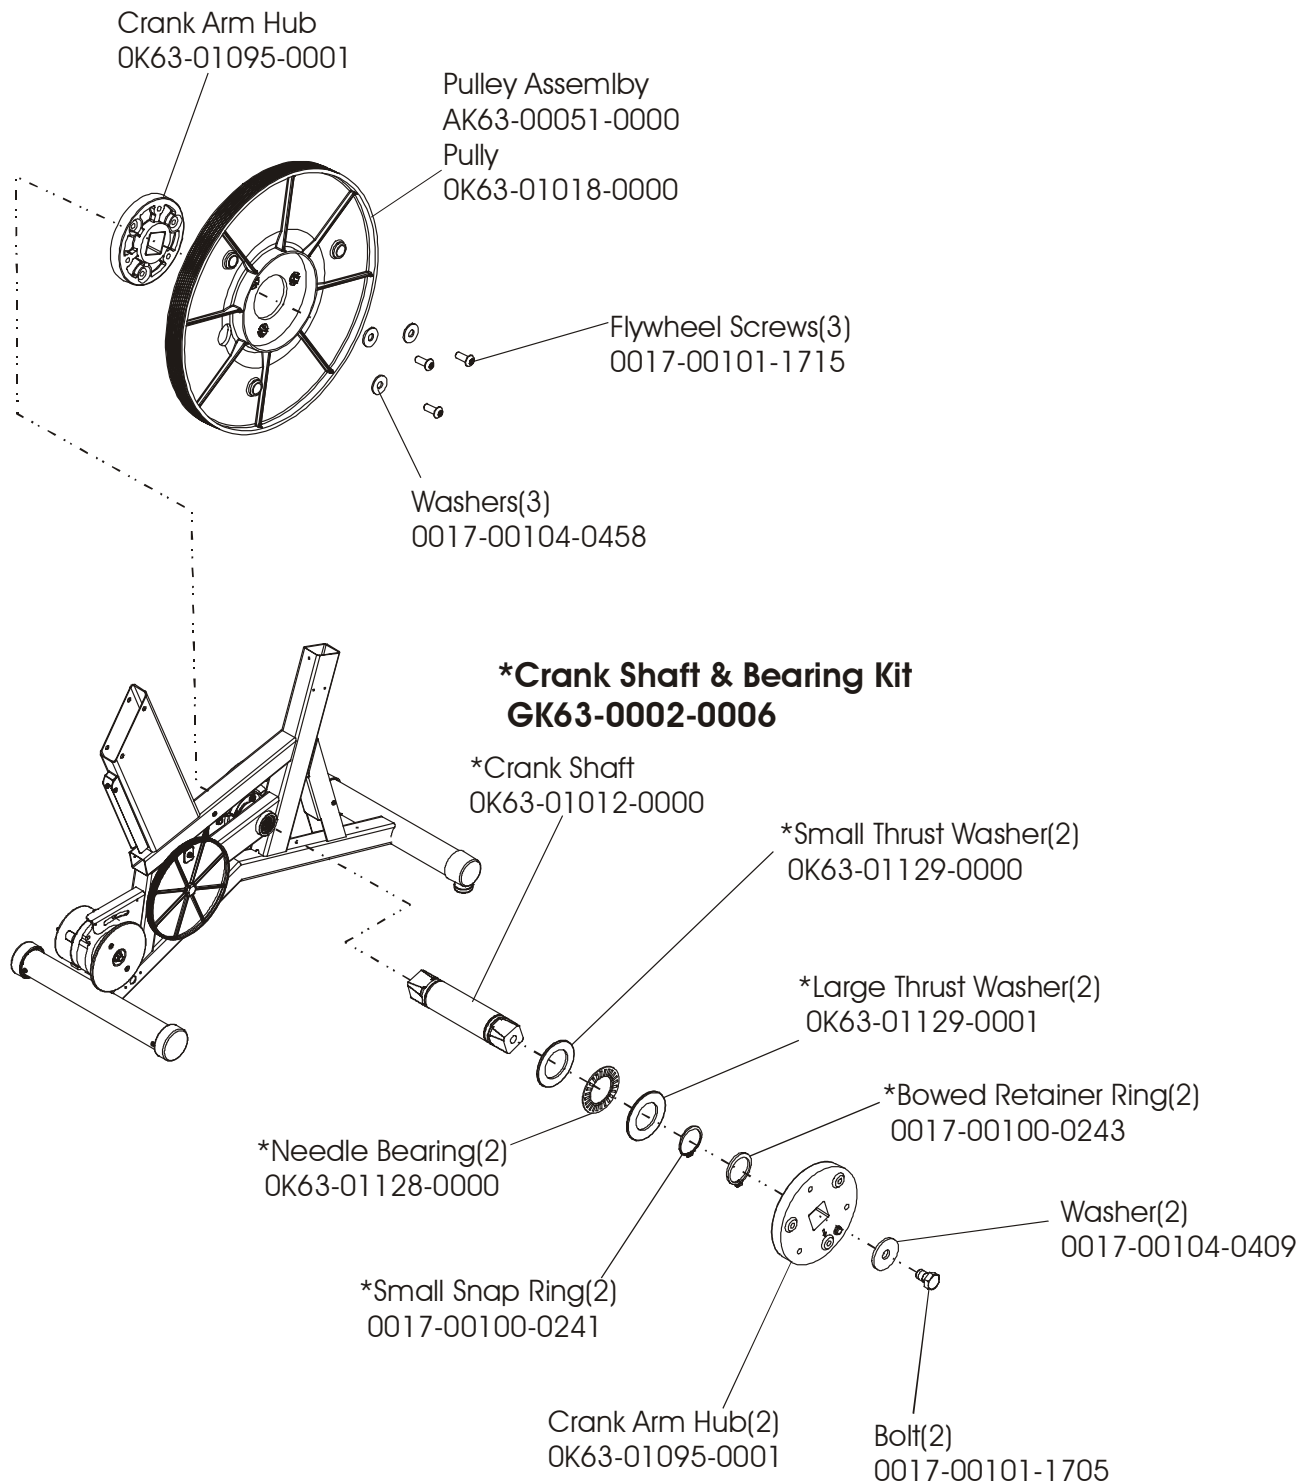

**ARCTIC SILVER 93CW**  
**Intermediate Shaft & Bearing Assy.**

**93CW-0XXX-02**  
**S/N CCM100000 and up**

Kit number – GK63-00002-0007umber – GK63-00002-0007

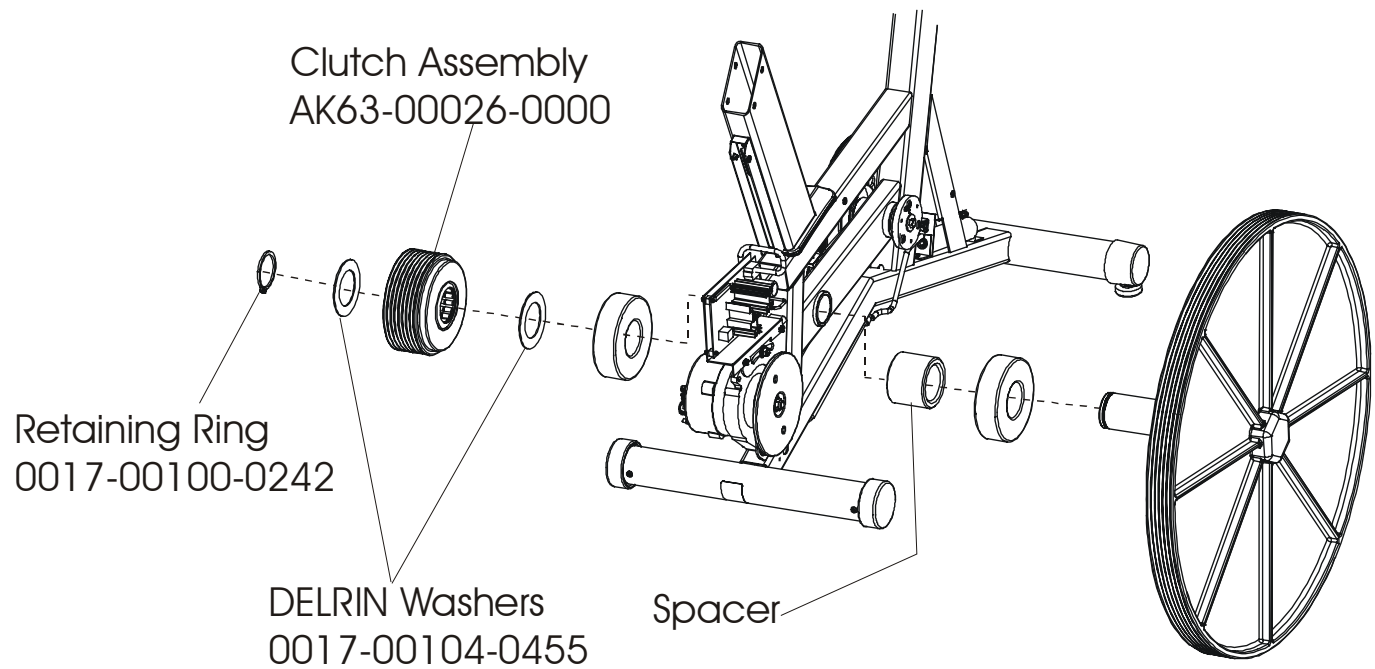




# ARCTIC SILVER 93CW

Seat Latch Assy. -AK63-00043-0001

93CW-0XXX-02

S/N CCM100000 and up

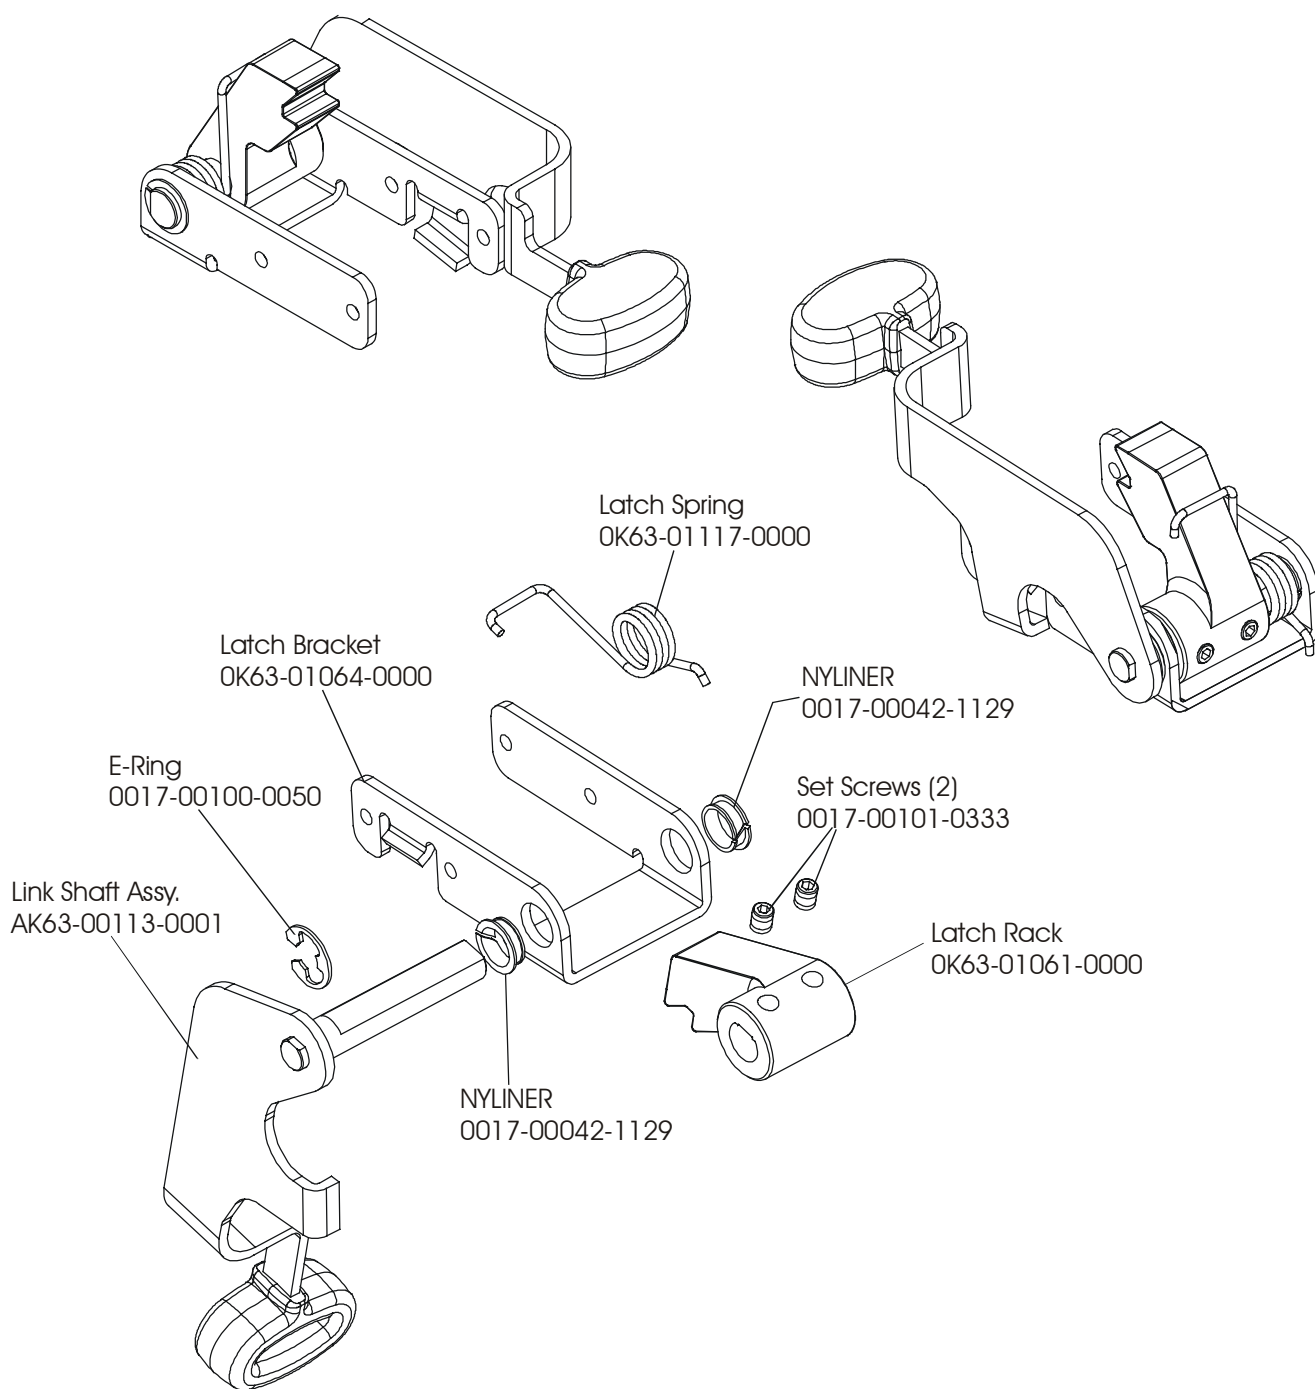


## ARCTIC SILVER 93CW

Seat Post Assy. – AK63-00232-0003



93CW-0XXX-02

S/N CCM100000 and up

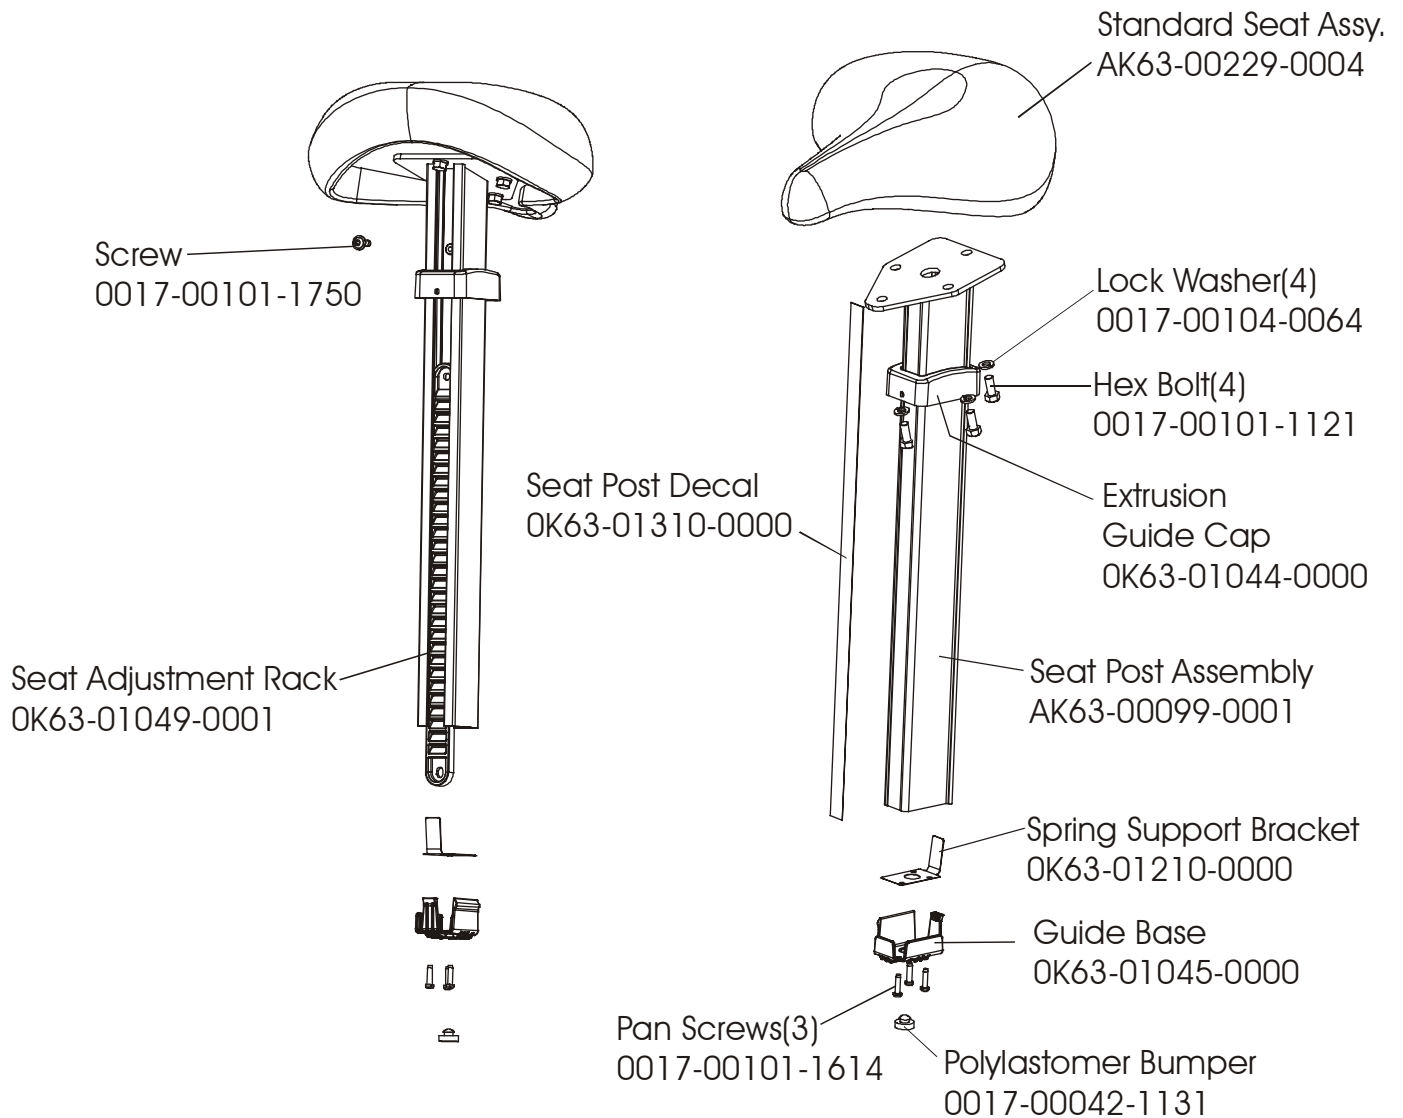

**ARCTIC SILVER 93CW**  
**Seat Post Shrouds**

**93CW-0XXX-02**  
**S/N CCM100000 and up**

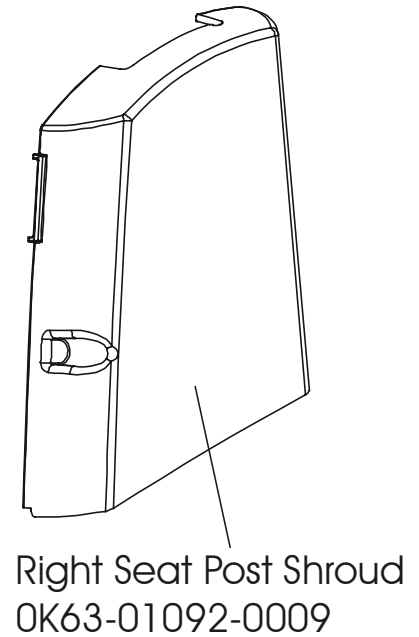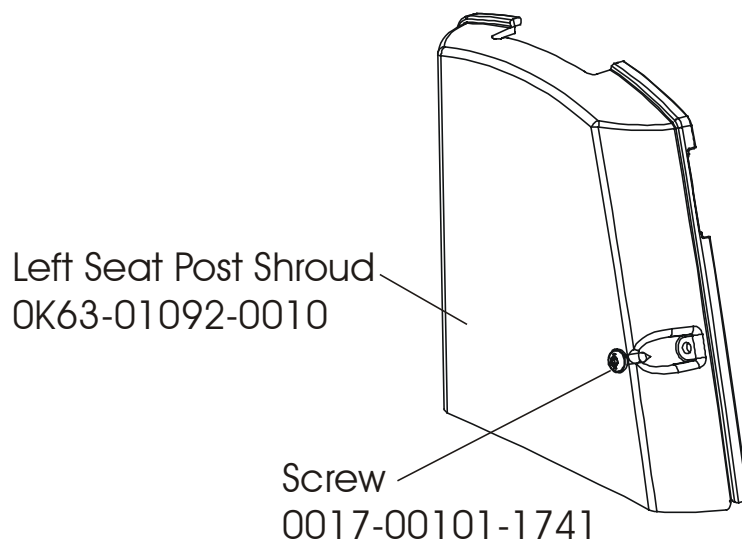


**ARCTIC SILVER 93CW**

**Idler Bracket Assy.-AK63-00021-0000**


**93CW-0XXX-02**

**S/N CCM100000 and up**

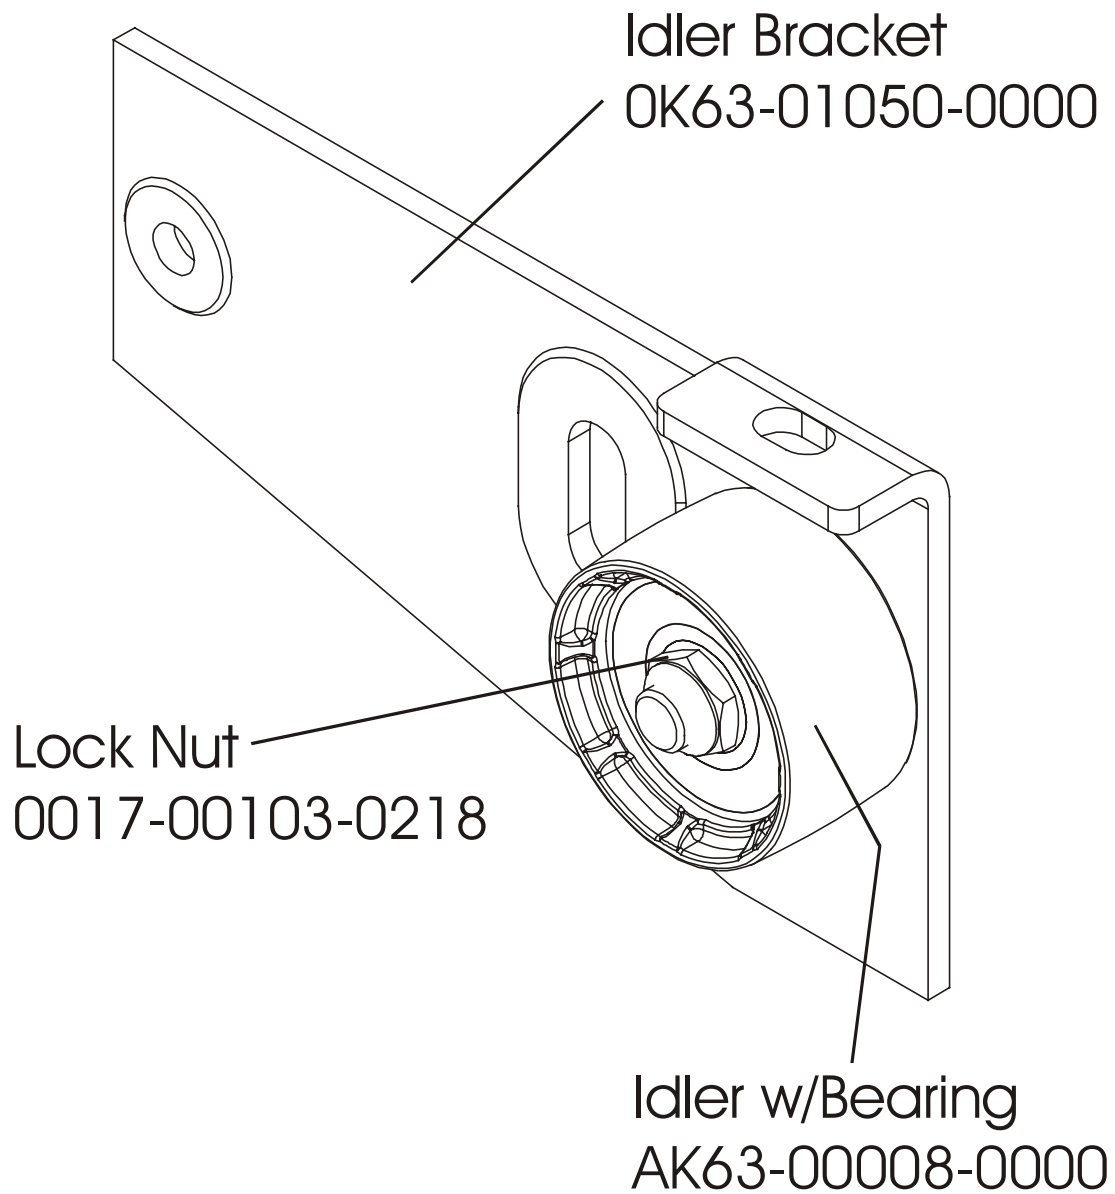

**ARCTIC SILVER 93CW**  
**Console Support Assembly**

**93CW-0XXX-02**  
**S/N CCM100000 and up**

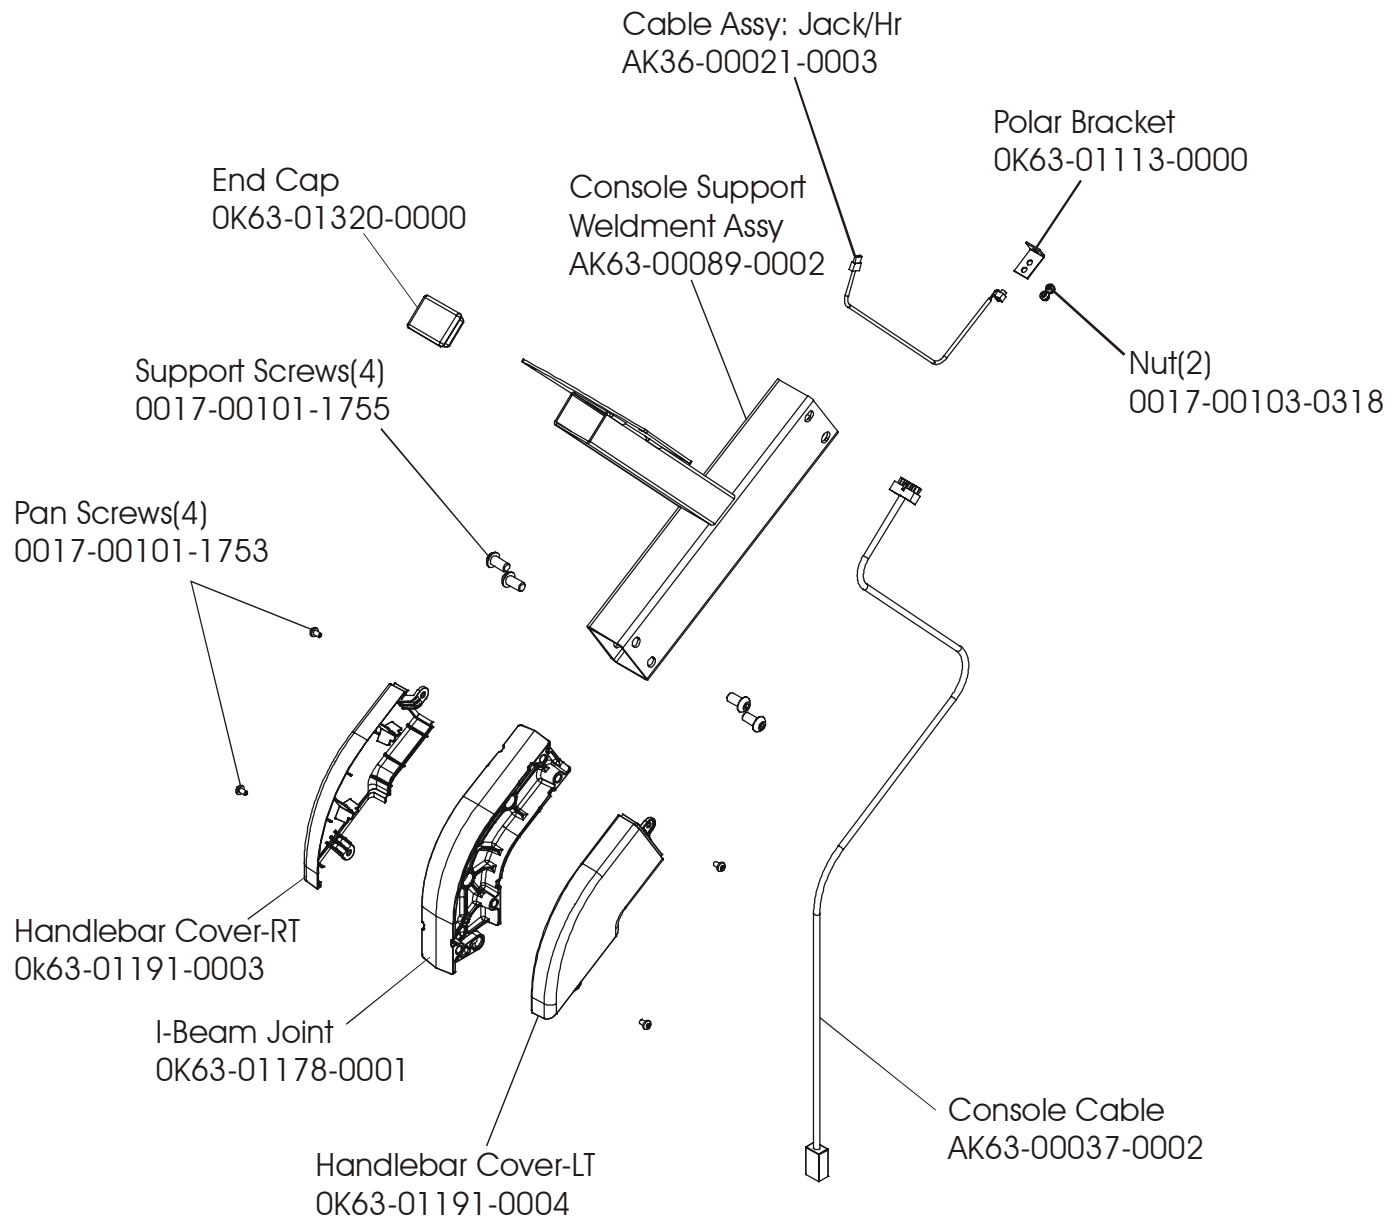


## ARCTIC SILVER 93CW

### Left Side Shroud and Crankarm

93CW-0XXX-02

S/N CCM100000 and up

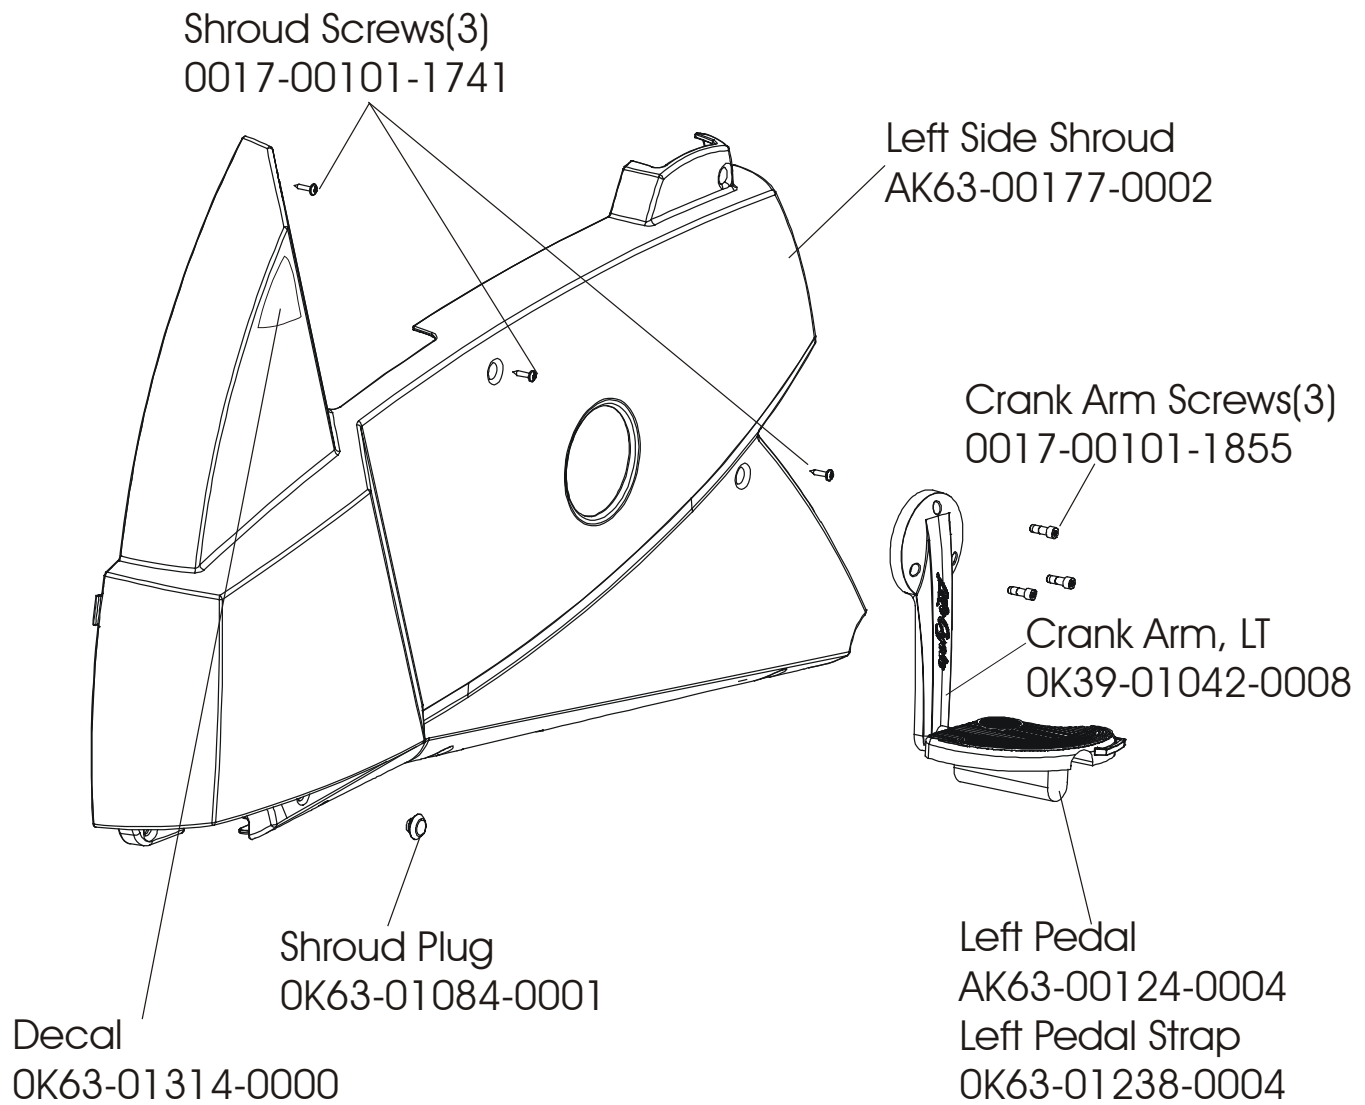


## ARCTIC SILVER 93CW

### Right Side Shroud and Crankarm

93CW-0XXX-02


S/N CCM100000 and up

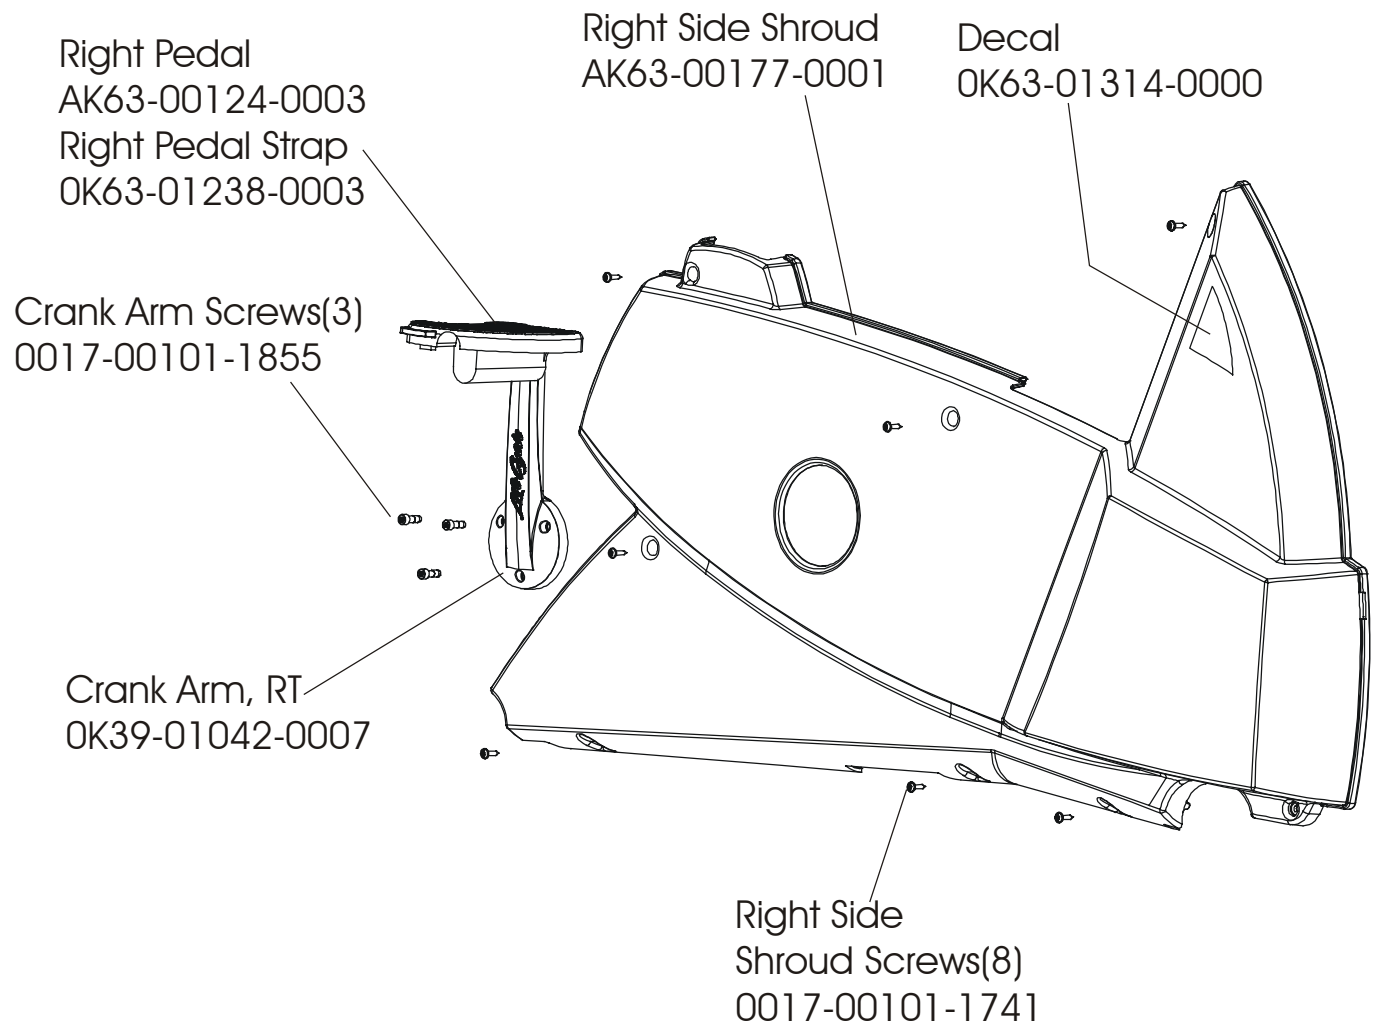

**ARCTIC SILVER 93CW**  
**PCB Mounting Bracket Assembly**

**93CW-0XXX-02**  
**S/N CCM100000 and up**

Assembly Number – AK63-00049-0000

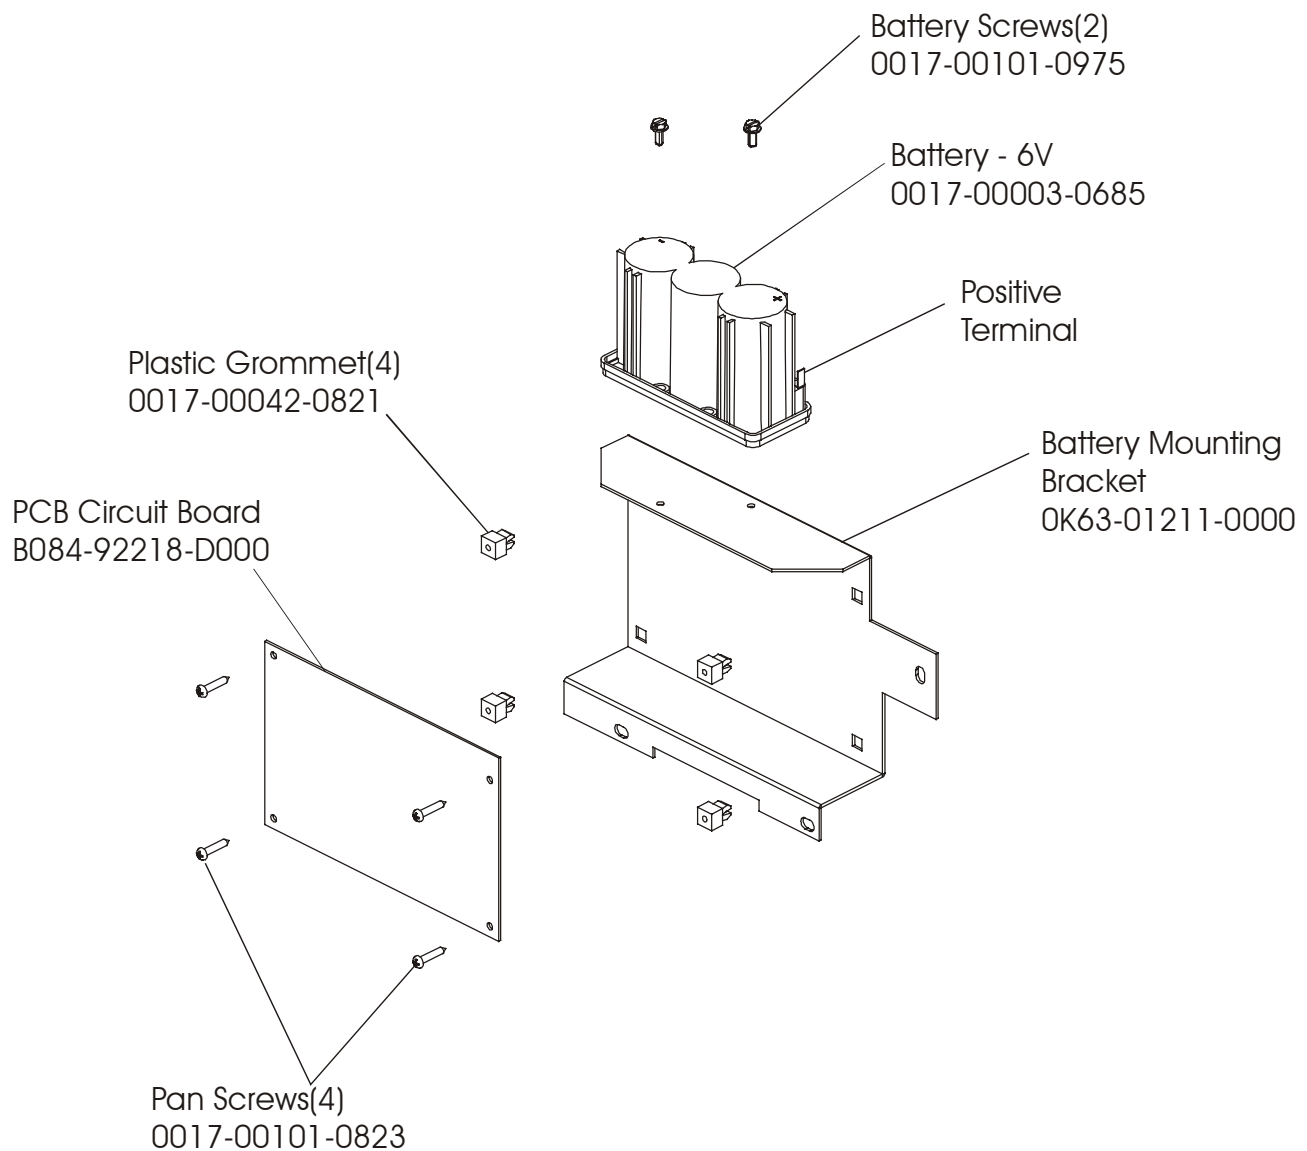




## ARCTIC SILVER 93CW

Front Wheels – AK63-00017-0001

93CW-0XXX-02

S/N CCM100000 and up

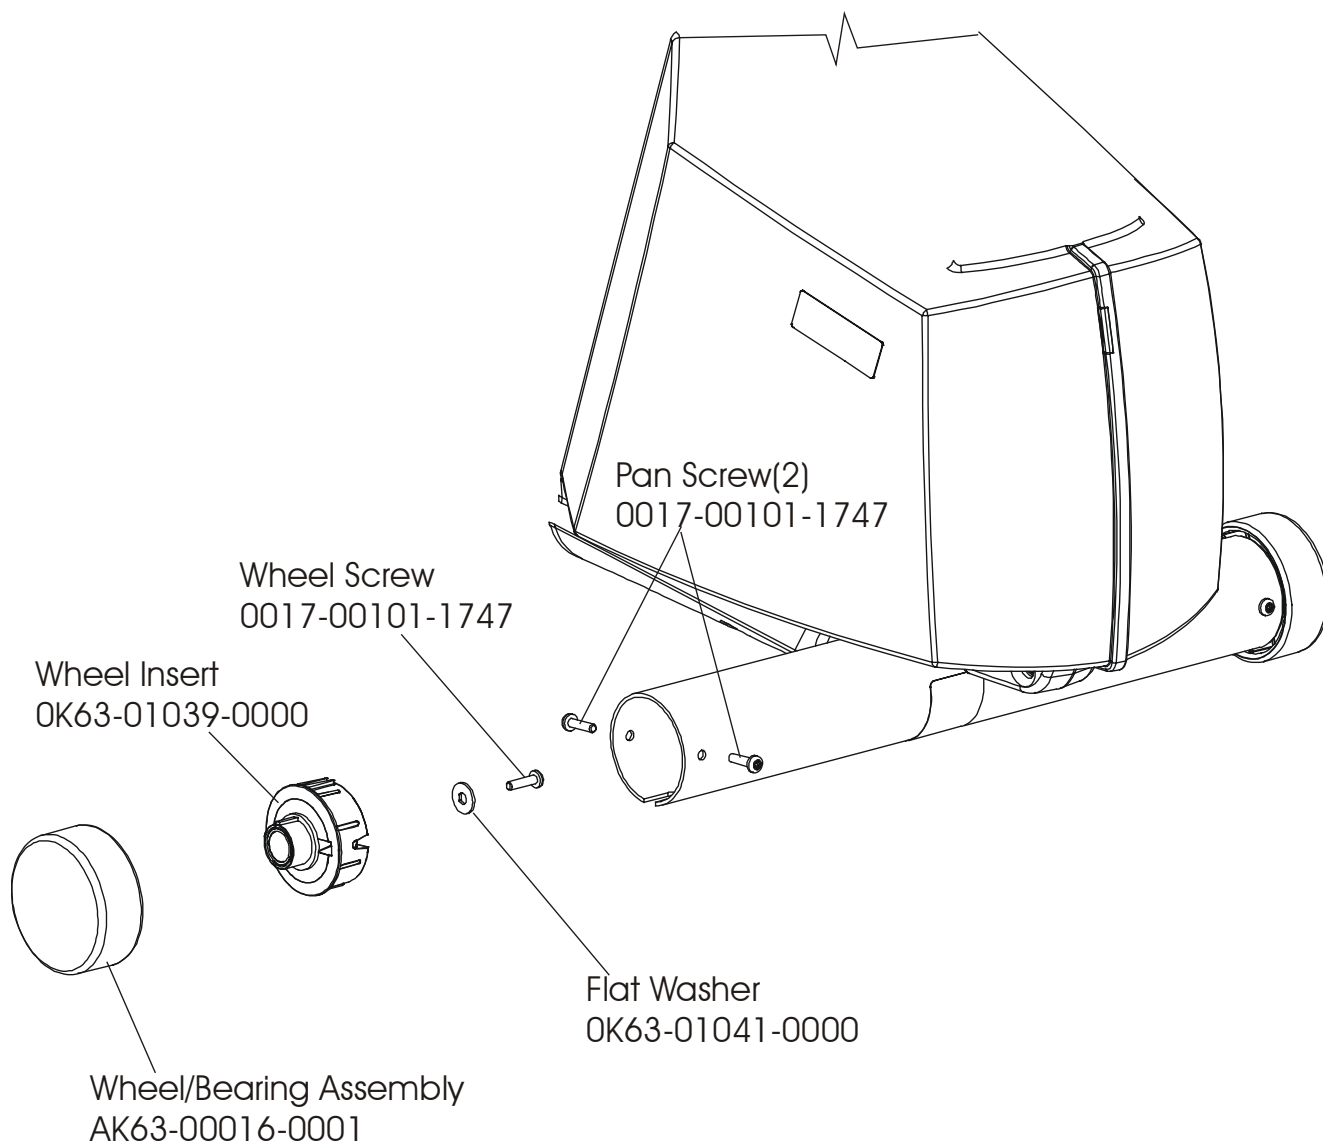


## ARCTIC SILVER 93CW

Resistor Assembly- AK63-00047-0000

93CW-0XXX-02

S/N CCM100000 and up

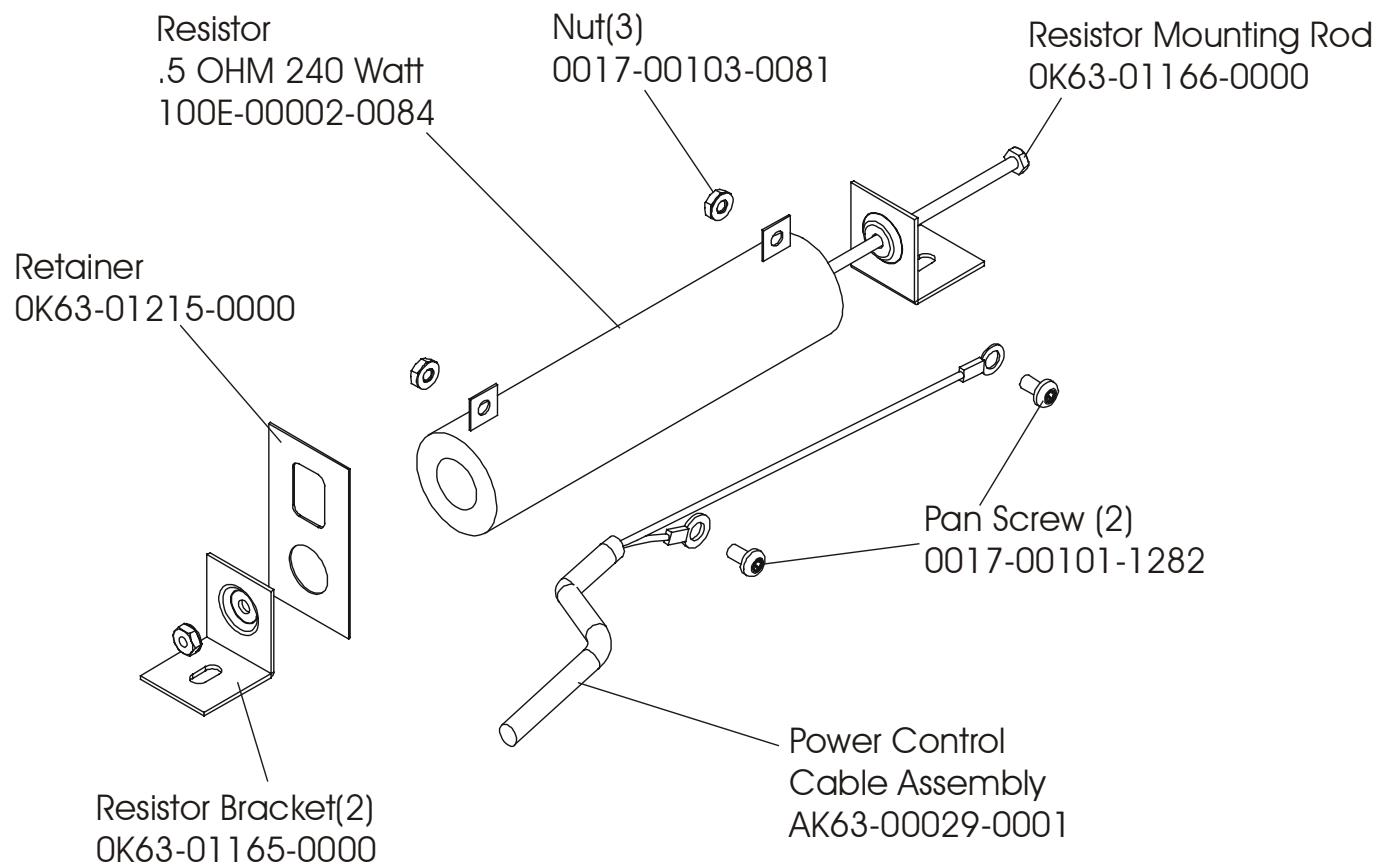


**ARCTIC SILVER 93CW**

**Handlebar Assy. - AK63-00101-0001**

**93CW-0XXX-02**

**S/N CCM100000 and up**


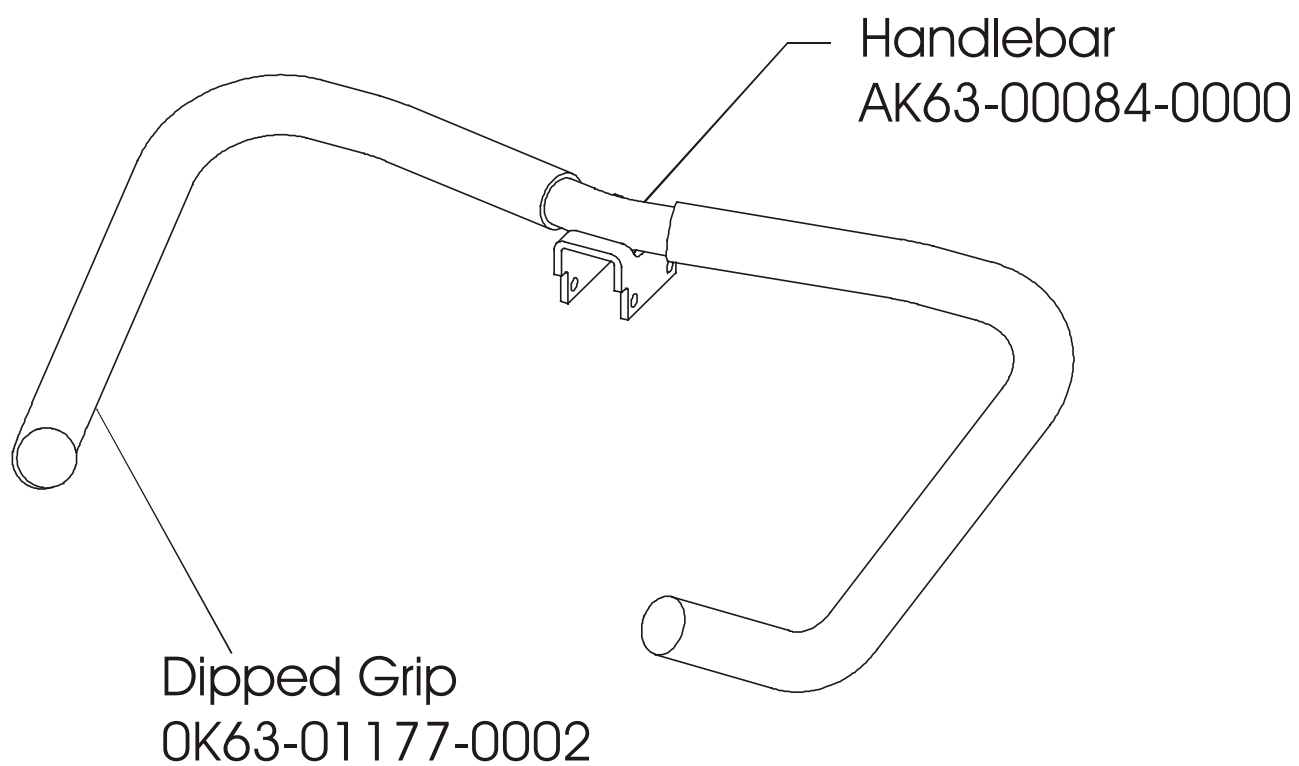


## ARCTIC SILVER 93CW

### Belts

93CW-0XXX-02

S/N CCM100000 and up

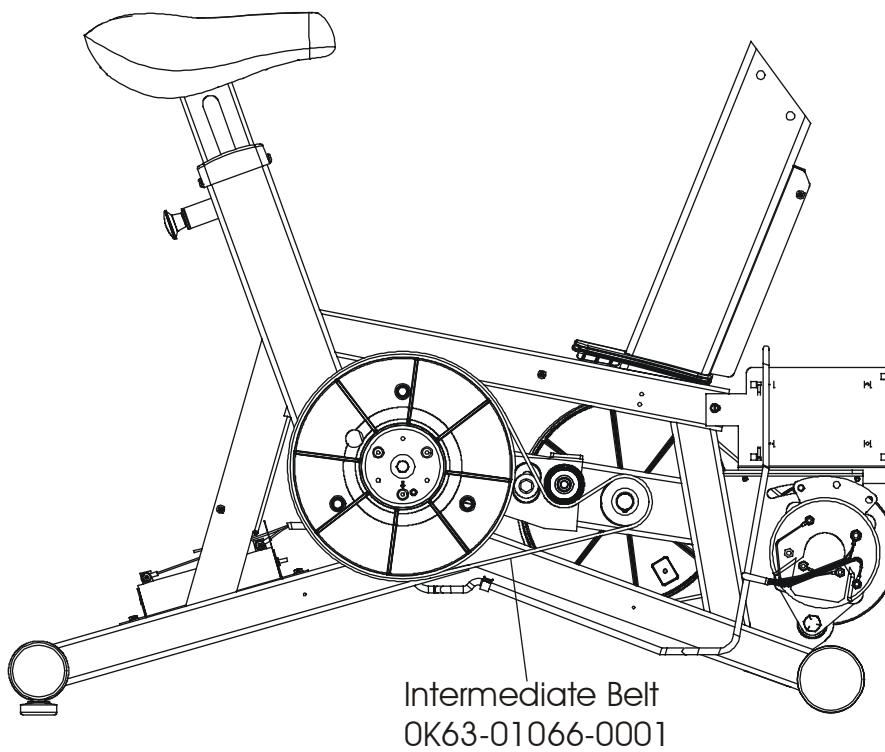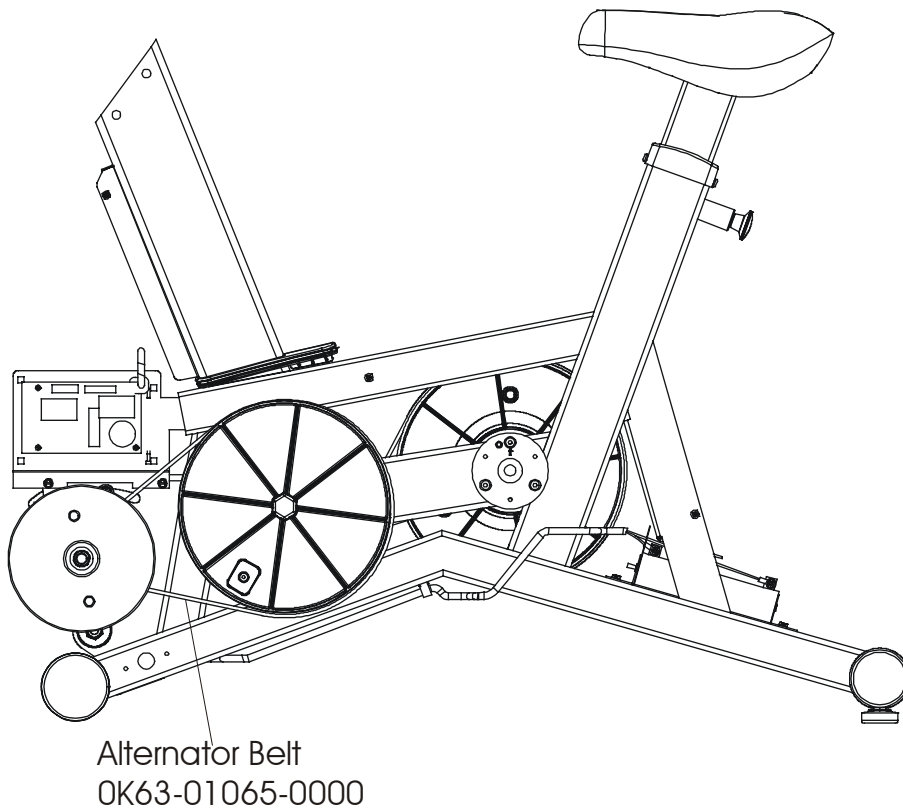

# ARCTIC SILVER 93CW

## Cables

93CW-0XXX-02  
S/N CCM100000 and up

